

## ASSEMBLY INSTRUCTIONS FOR YOUR DECKER PENDANT

### IMPORTANT SAFETY INSTRUCTIONS:

- \* These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- \* **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- \* Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- \* If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
- \* This fixture is U.L. rated for dry locations.

### ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove mounting plate (A) from canopy (C) by removing canopy screws (D). Set canopy screws (D) aside.
4. Measure desired drop for fixture to hang and add/remove extension tubes (H). Guide wiring through extension tubes before threading tubes together. **\*\*ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into the threaded opening of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire\*\***
5. Thread bottom extension tube (H) onto threaded tube (I).
6. Secure quick link (F) to hang straight (E) and loop (G).
7. Guide wire exiting the top extension through loop (G), quick link (F), through the center of the hang straight (E), and up through the hole in the canopy (C).
8. Cut the cord to the desired length to make electrical connections. Note: At least 8 inches of wire is needed to make proper electrical connections.
9. Make proper electrical connections described in steps 10 - 12. A LICENSED ELECTRICIAN IS RECOMMENDED.
10. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (Q) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into the ceiling outlet box.
14. Gently push wire connections back into ceiling outlet box. Slide canopy (C) over mounting plate (A). Thread screws (D) into holes in canopy (C) to secure fixture to ceiling.
15. Lift shade (M) over bottom section of fixture. Slide split washer (L) between shade washer (J) and shade washer (K). Secure position of shade (M) by turning shade washer (J) clockwise until it rests firmly against split washer (L).
16. Install (3) 100W MAX Type A, medium base bulbs into sockets.
17. Slide diffuser (O) over the end of threaded tube (N). Screw finial (P) onto threaded tube (N) until hand tight. Note: Do not overtighten as this could damage the diffuser.
18. Reconnect main electrical supply from the fuse box/ circuit breaker and test the fixture.

# ASSEMBLY INSTRUCTIONS FOR YOUR DECKER PENDANT

