
ASSEMBLY INSTRUCTIONS FOR YOUR

SLOAN WIDE TABLE LAMP

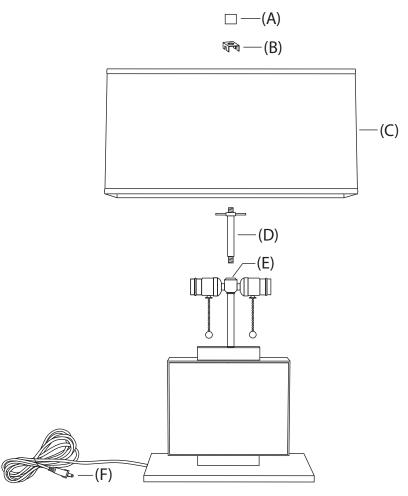

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

- 1. Unpack all parts and remove packing materials. Place lamp base on level surface.
- 2. Install two 100W Max. Type A, medium base bulbs into the sockets.
- 3. Remove finial (A) from shade riser (D). Thread shade riser (D) into socket housing (E).
- 4. Place shade (C) onto shade riser (D). Place shade lock (B) onto shade riser (D). Note: shade lock (B) should be turned so cutouts fit over alignment arms located at the top of shade riser (D).
- 5. Thread finial (A) back onto shade riser (D) to secure the shade to the lamp.
- 6. Remove protective plastic from polarized plug (F).
- 7. Insert plug (F) into wall outlet.
- 8. Control power to the fixure using the pull chains on the sockets.

^{**} To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. **